 


Digital Adapter User Guide

1. Connect one end of a coaxial cable to the coaxial wall outlet and connect the other end to the “CABLE IN” port on the Digital Adapter.
2. Connect one end of another coaxial cable to the “TO TV” port on the Digital Adapter and the other end to the input port on the TV.
3. Connect the power cord to the electrical wall outlet and the “+5V DC IN” port on the Digital Adapter.
4. Make sure the channel 3/4 switch on the back of the Digital Adapter matches the channel on your television. If your Digital Adapter is set to channel “3”, make sure that your television is also on channel “3”.

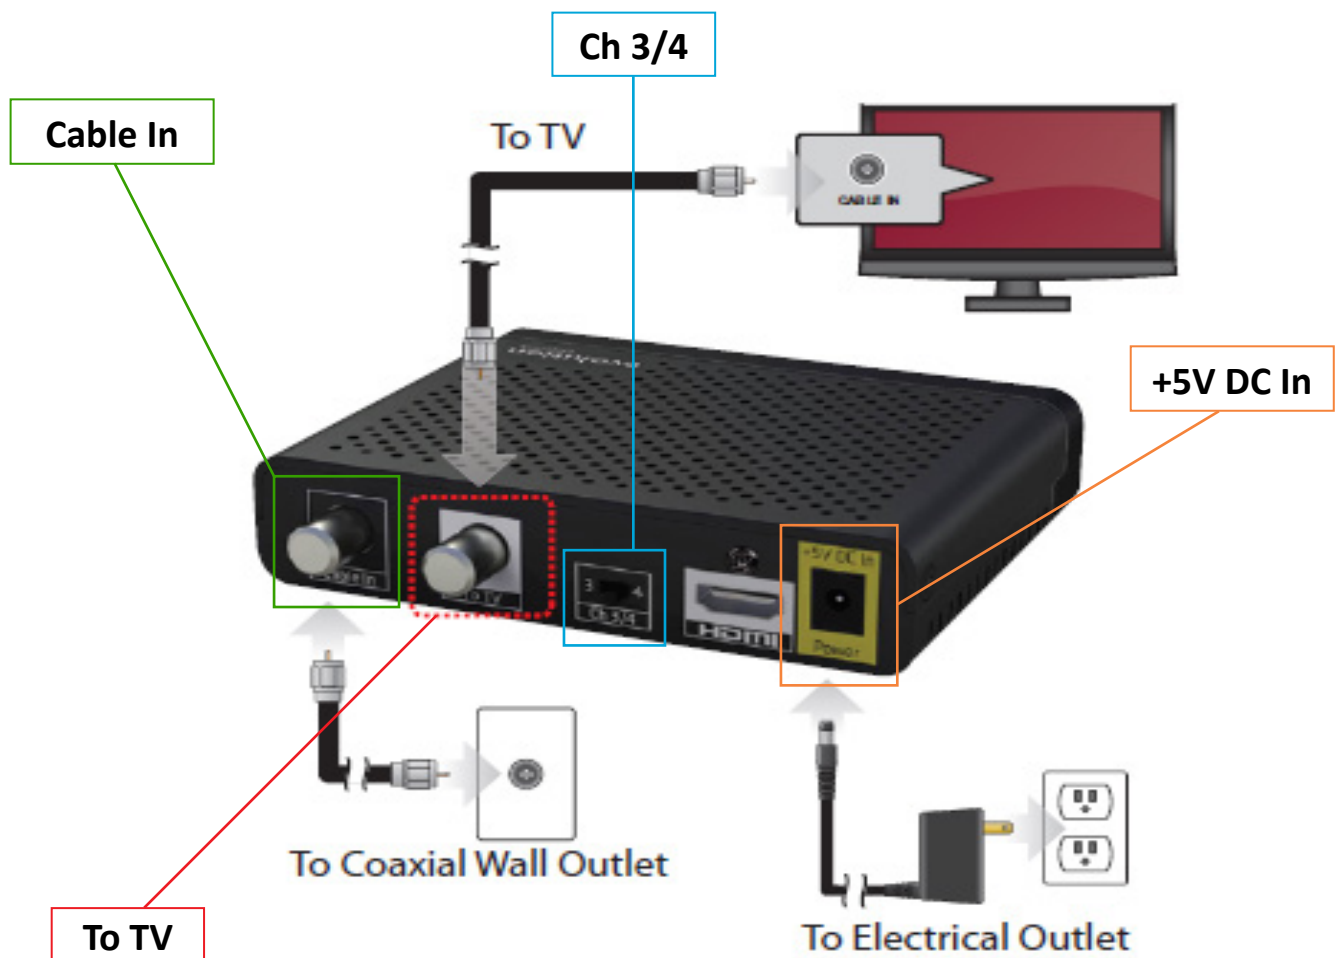

Press the **MENU** button on your remote control to access the main menu and update your Digital Adapter settings. Press the arrow buttons (▲▼▶◀) to navigate through the menu. Press **EXIT** anytime to return to watching live TV.



Your remote control can be paired directly with your Digital Adapter, allowing you to place the device out of sight (for example: in an entertainment center or behind your TV).

1. Press the **MENU** button on the remote control
2. Select the **REMOTE CONTROL** option and then select the **REMOTE CONTROL PAIRING** option
3. Press and hold the **SETUP** button until the LED indicator turns green
4. Press the **MENU** button (allow a few seconds for the menu to display)
5. Enter the pairing code displayed in blue on the pairing code pop-up screen


Once your remote control is paired to a specific Digital Adapter, it will not control any other Digital Adapter in your home.

To remove the pairing:

1. Press and hold the **SETUP** button until the LED indicator turns green
2. Enter **9-8-7** on the remote control
3. The LED indicator will blink green twice


Audio Language

- Select **AUDIO LANGUAGE**
- Press the **OK** button on your remote control
- Scroll to select the desired audio language

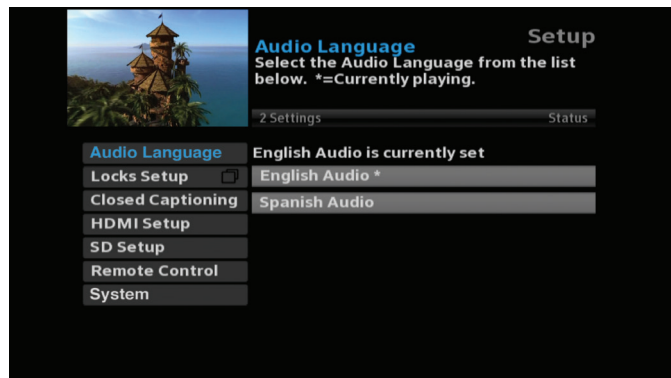


Close Captioning

 - Select **CLOSED CAPTIONING**
- Press **OK** to change the status from ON/OFF
- Select **APPLY** to change the setting

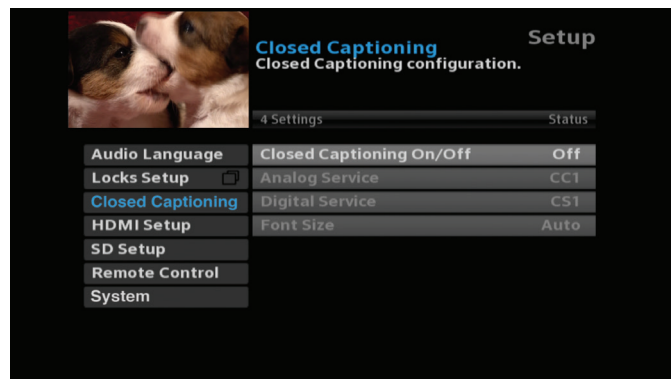


Locks Setup

The first time you enter Locks Setup, it will prompt you to Create Locks PIN. This PIN will be needed to Change PIN, Clear PIN and Set Channel Locks.

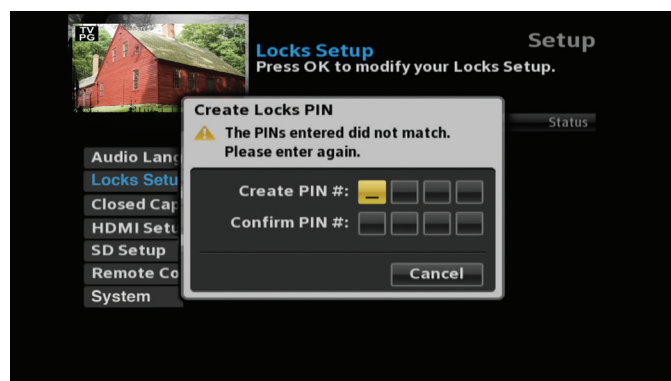


Set Channel Locks

 - Select **CHANNEL LOCKS**
- Scroll up or down to highlight the channel you would like to lock
- Press the **OK** button and you will see the unblock icon change to lock

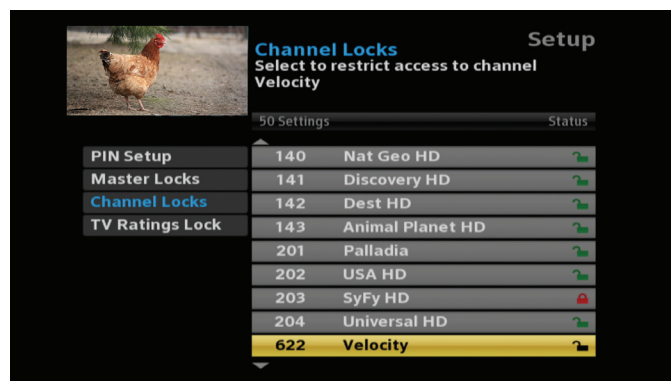

TV Ratings Lock

Use the arrow (▲/▼) buttons to highlight the TV Ratings you want locked and select **OK** to lock or unlock the ratings. When you select a rating it will lock all programs with that rating and higher.

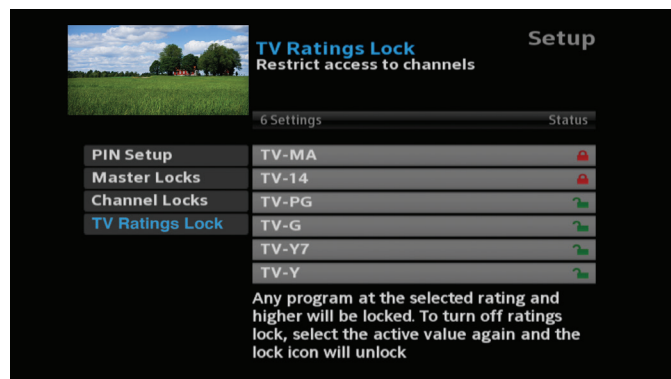

Force remote control to send volume commands to the TV:

1. Press and hold the **SETUP** button until the LED indicator turns green
2. Press the **VOLUME UP** button on the remote control
or press the **VOLUME DOWN** button to force the remote control to send the volume control commands to the Digital Adapter.